




COLOURBOND NAILSTRIP FIXING INSTRUCTIONS

TYPICAL EAVES GUTTER

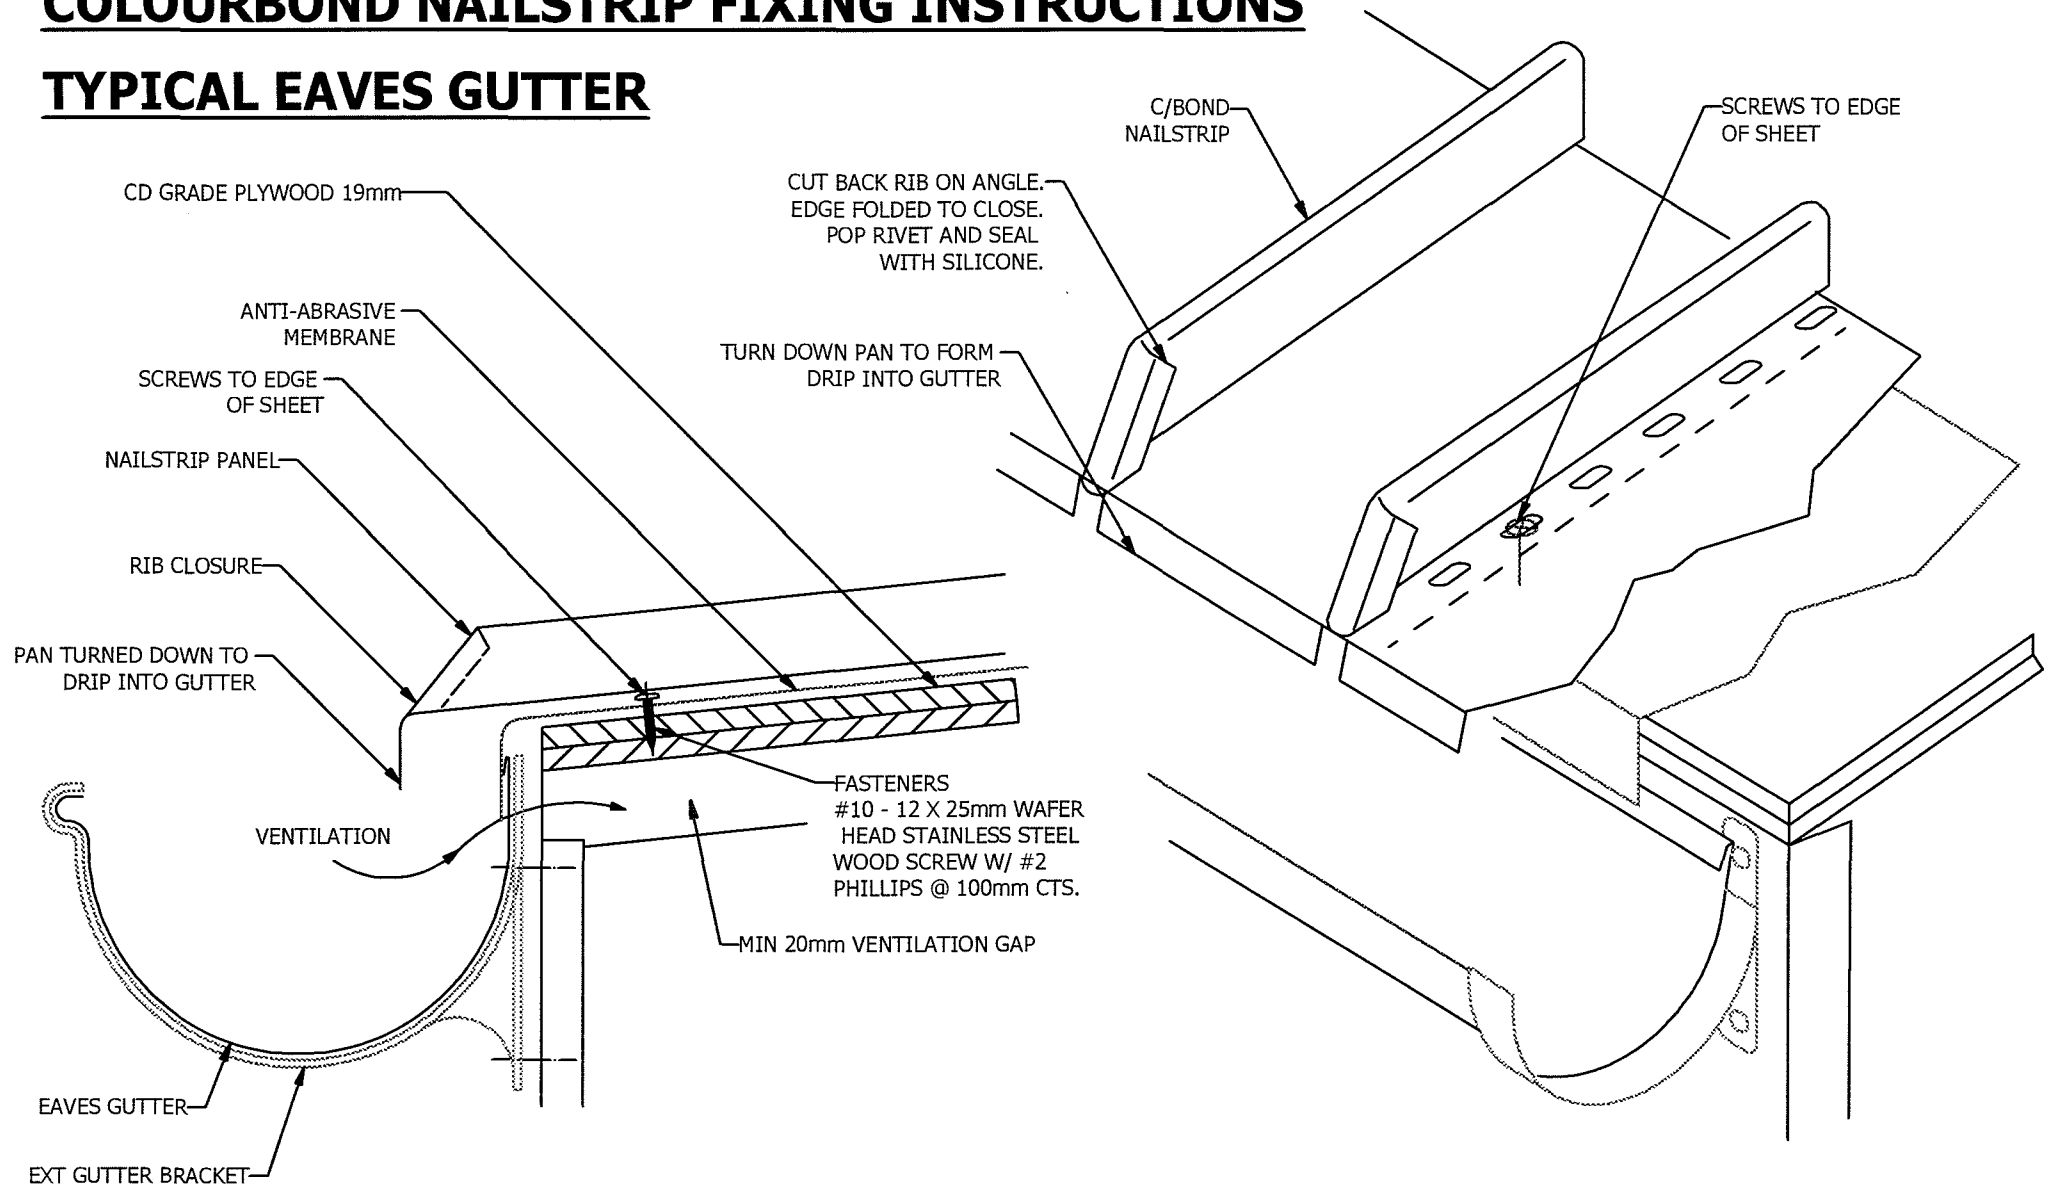


COLOURBOND NAILSTRIP FIXING INSTRUCTIONS

TYPICAL CAPPING WITHOUT GUTTER

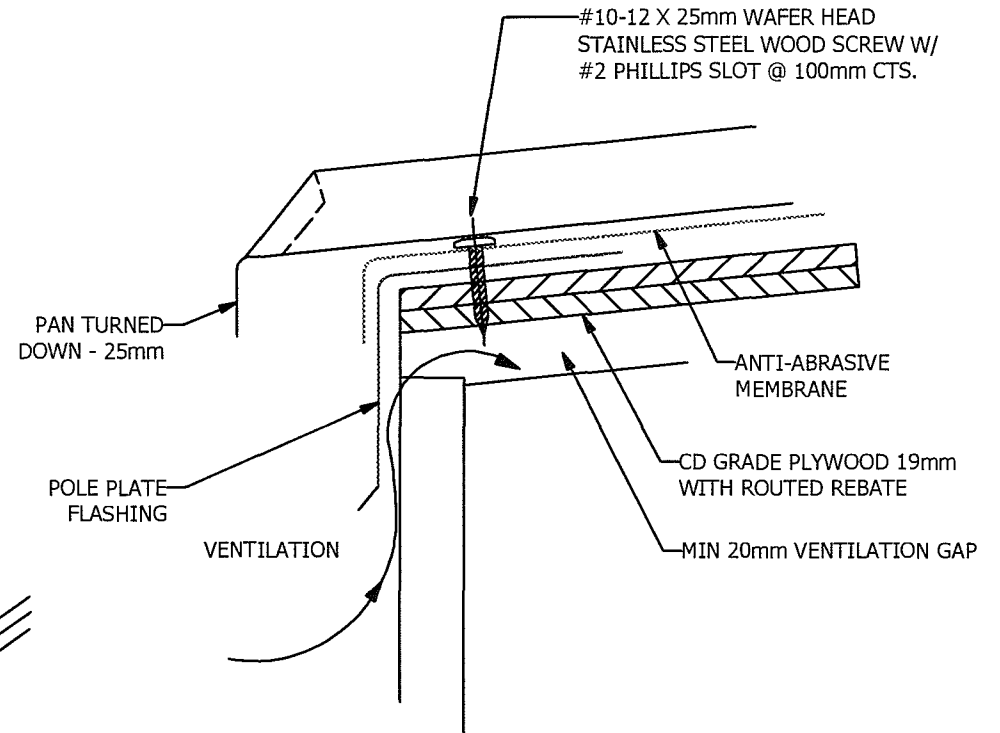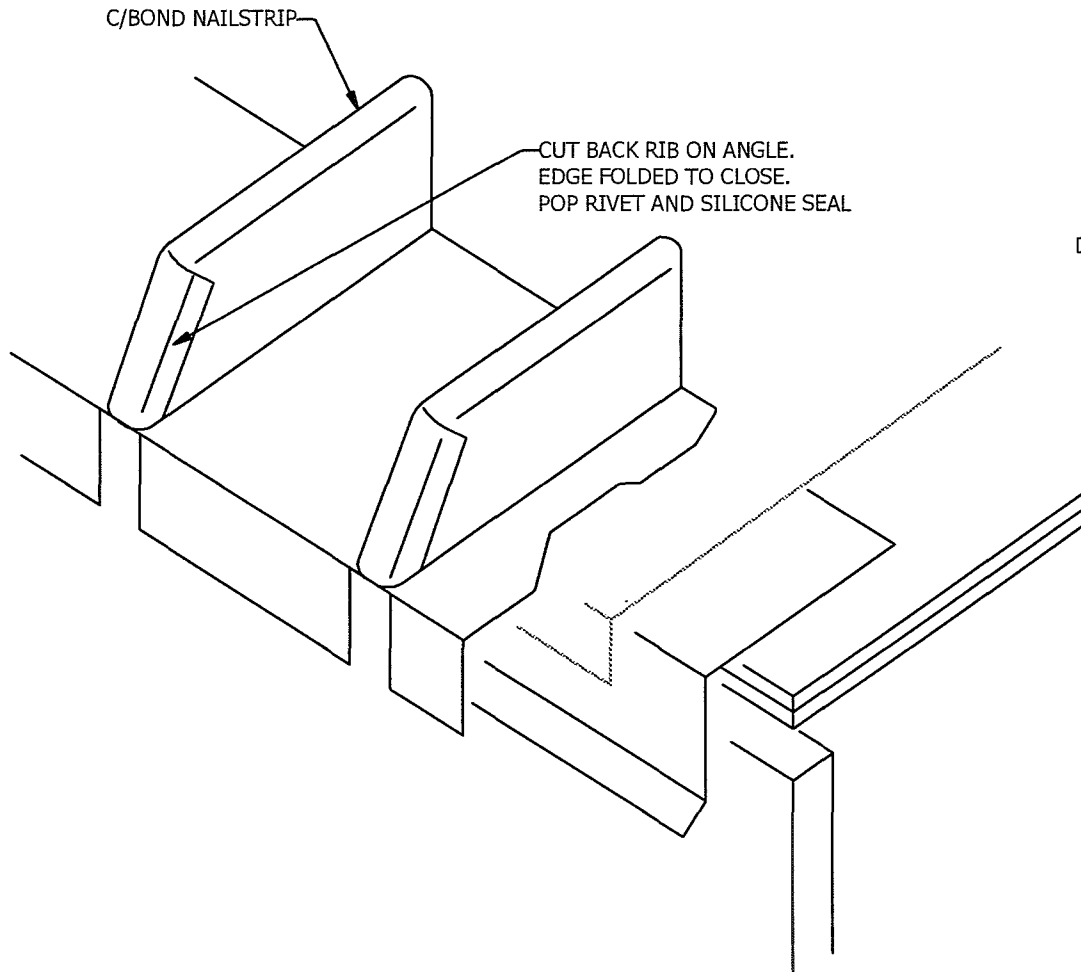



COLOURBOND NAILSTRIP FIXING INSTRUCTIONS

TYPICAL CAPPING TO TOP OF SHEET

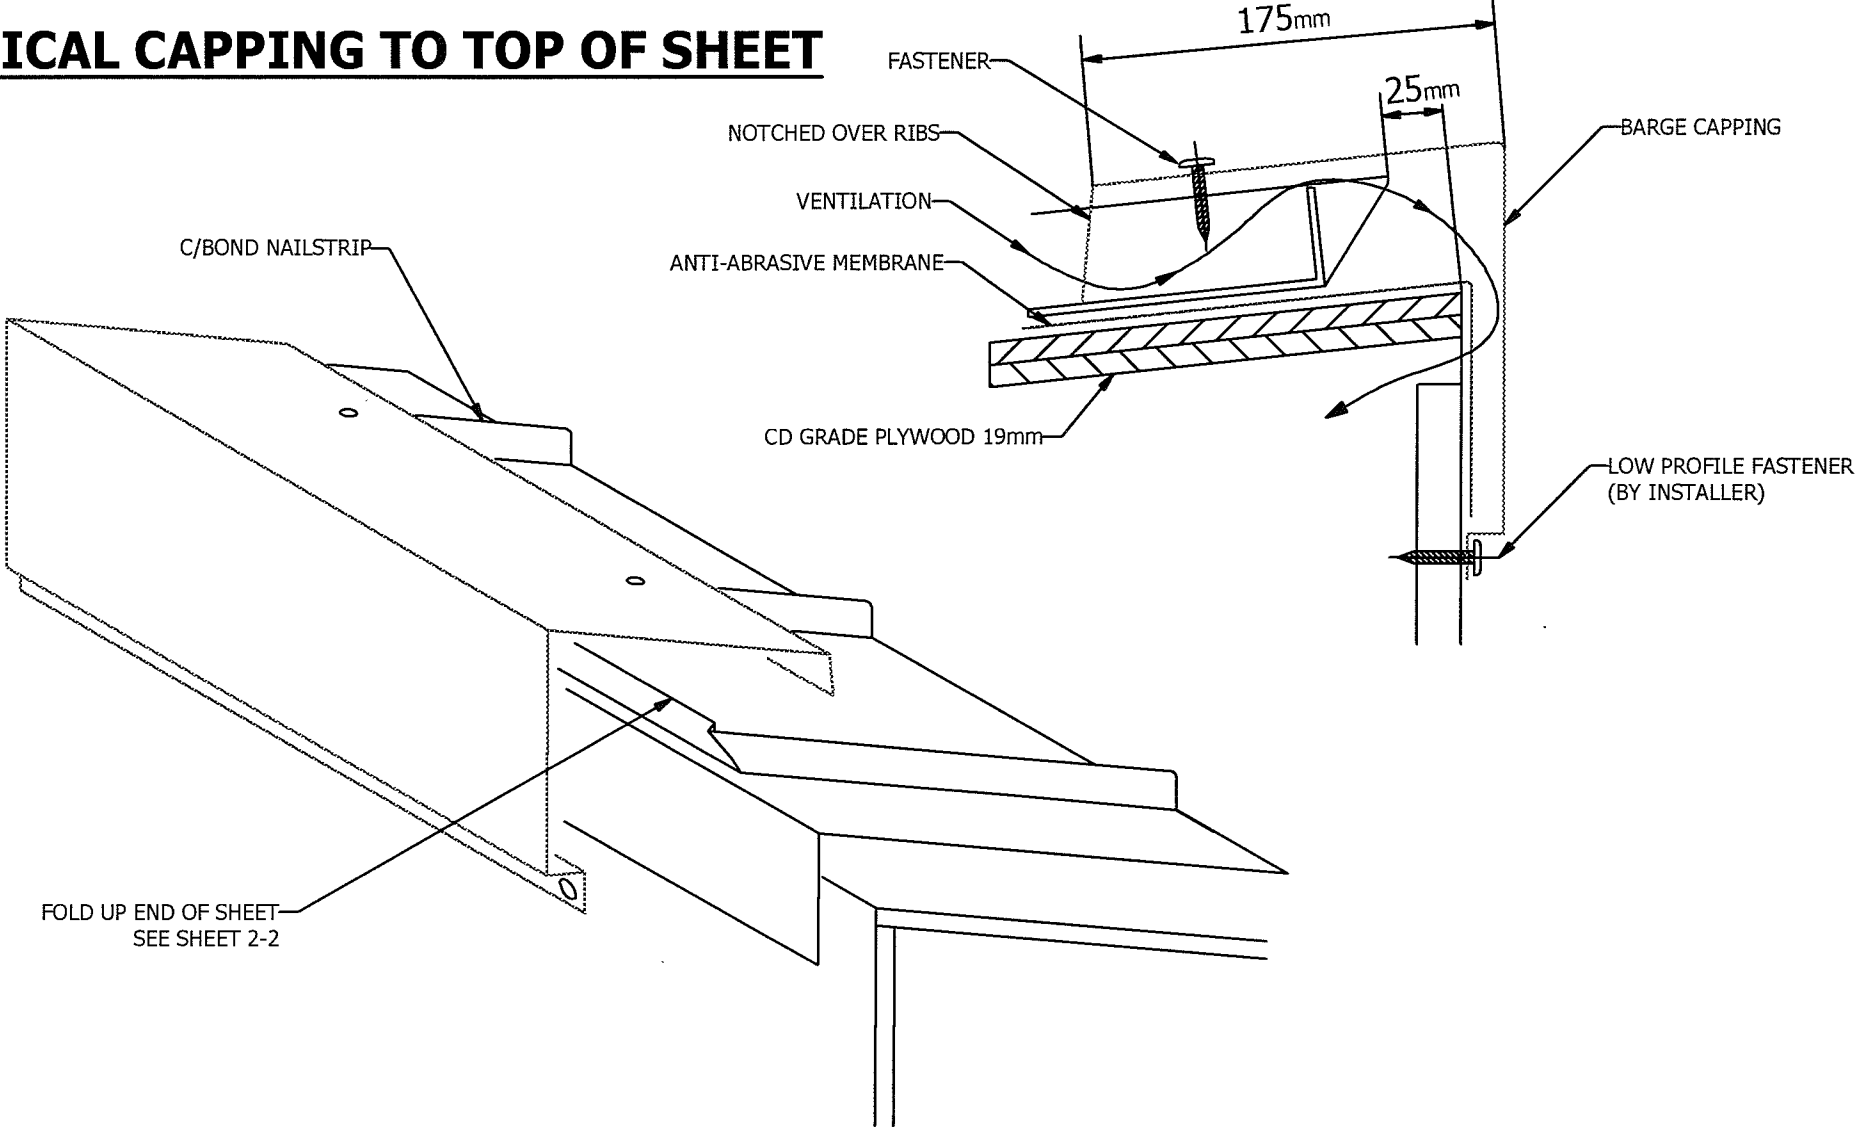

COLOURBOND NAILSTRIP FIXING INSTRUCTIONS



TYPICAL RIDGE

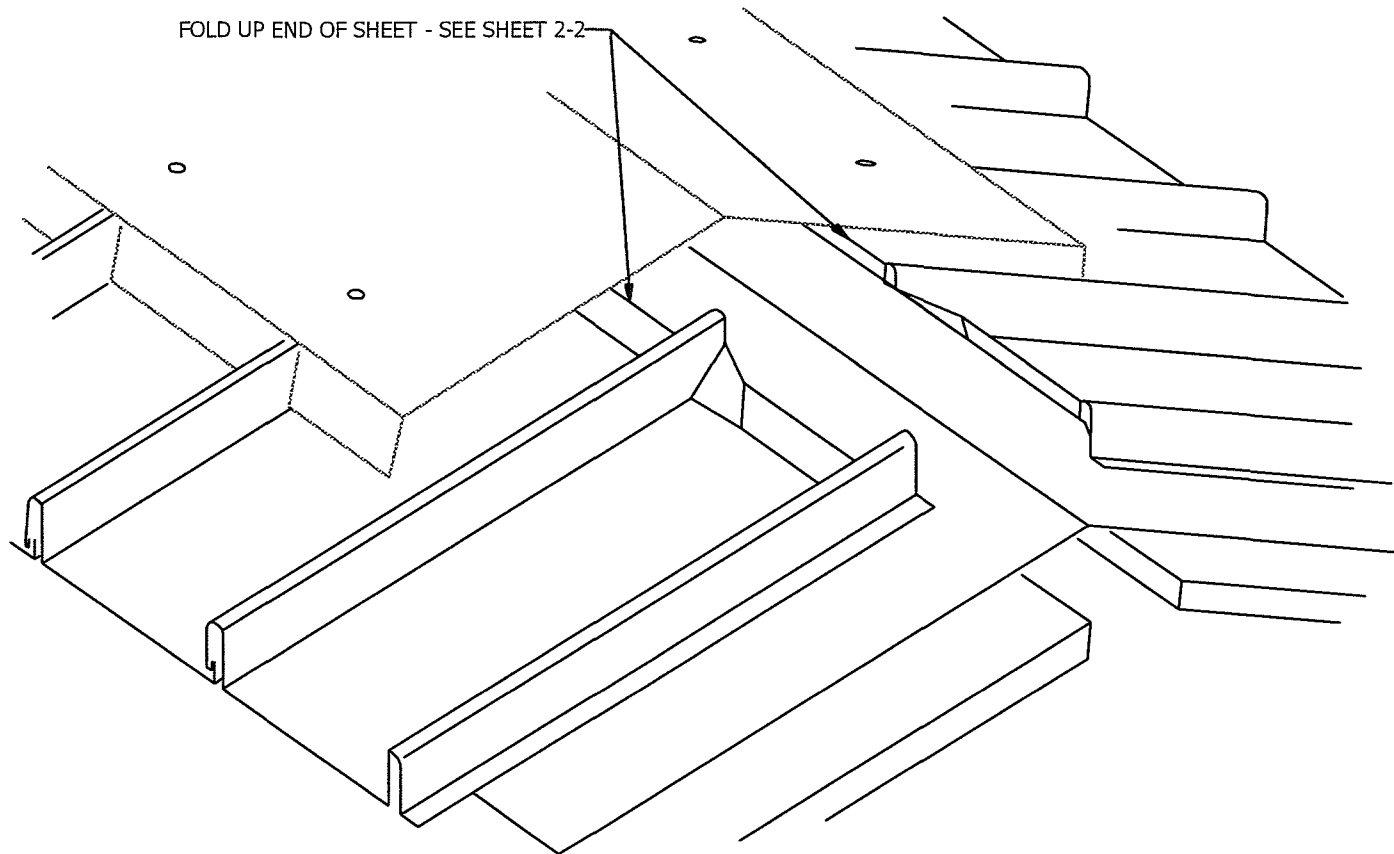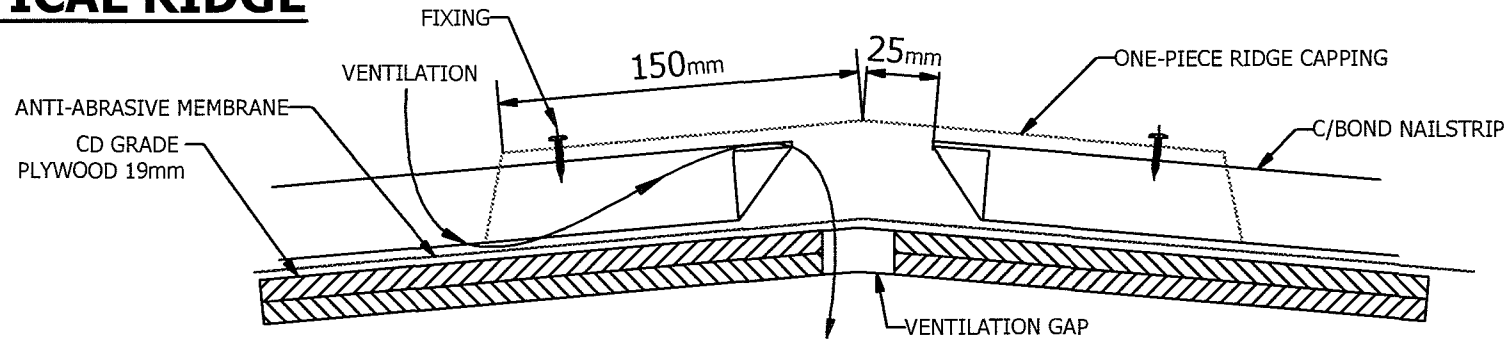


COLOURBOND NAILSTRIP FIXING INSTRUCTIONS

TYPICAL BARGE

OPTION A - 240mm AND UNDER PAN WIDTH

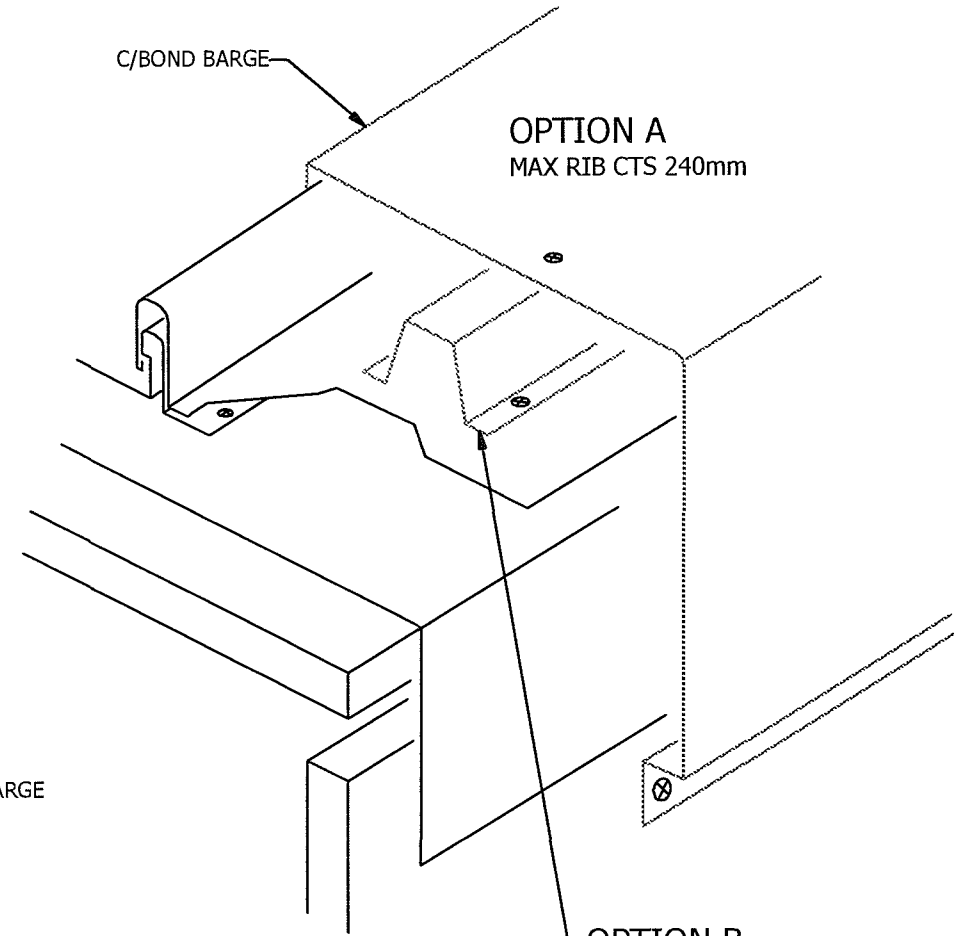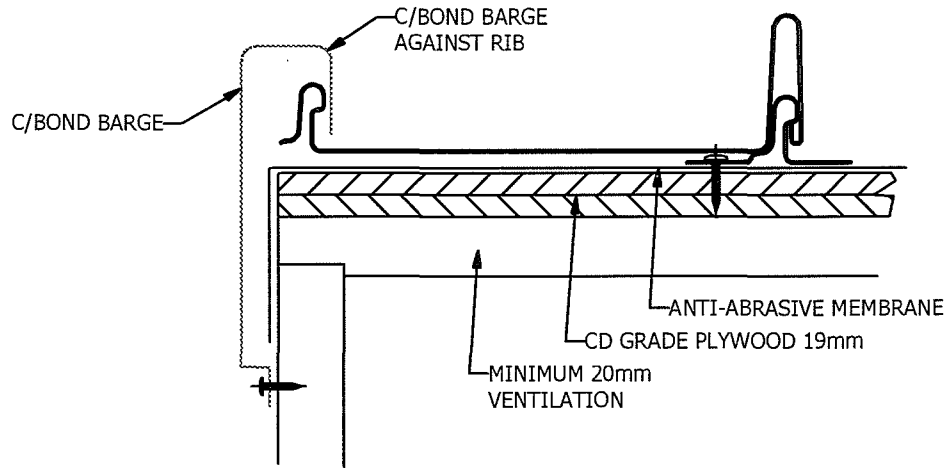



OPTION B - OVER 240mm PAN WIDTH

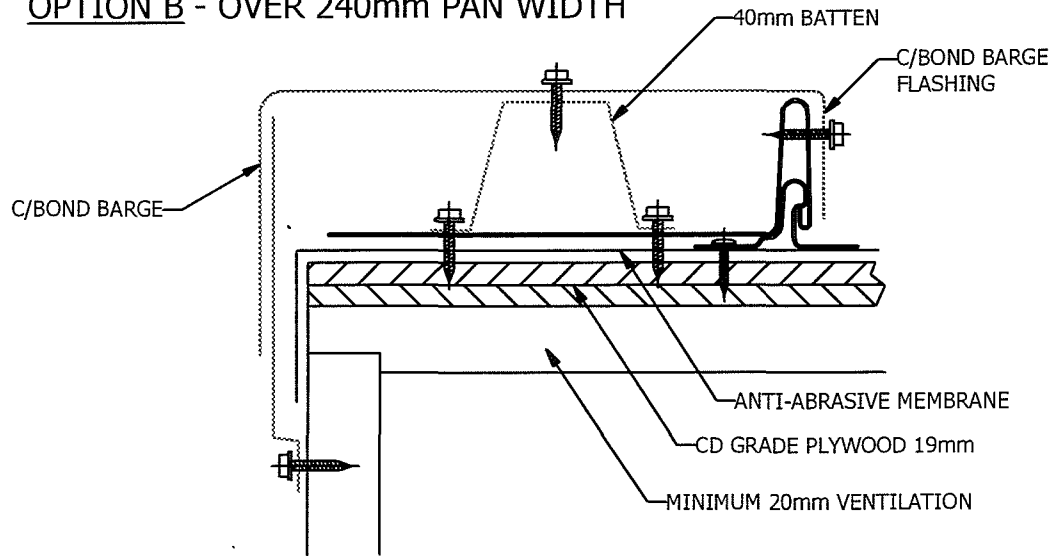

OPTION B
40mm BATTEN
MID SPAN OVER
240 WIDE PAN


COLOURBOND NAILSTRIP FIXING INSTRUCTIONS

TYPICAL APRON FLASHING TO WALL

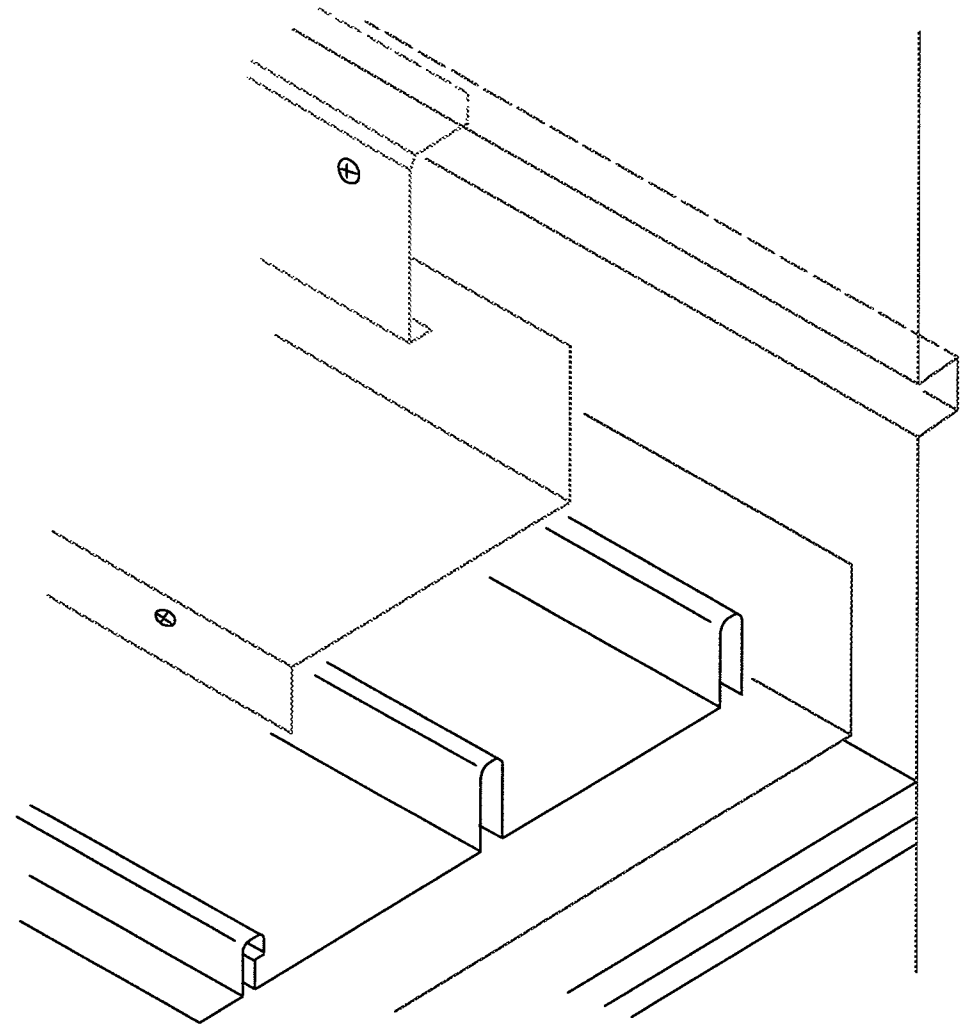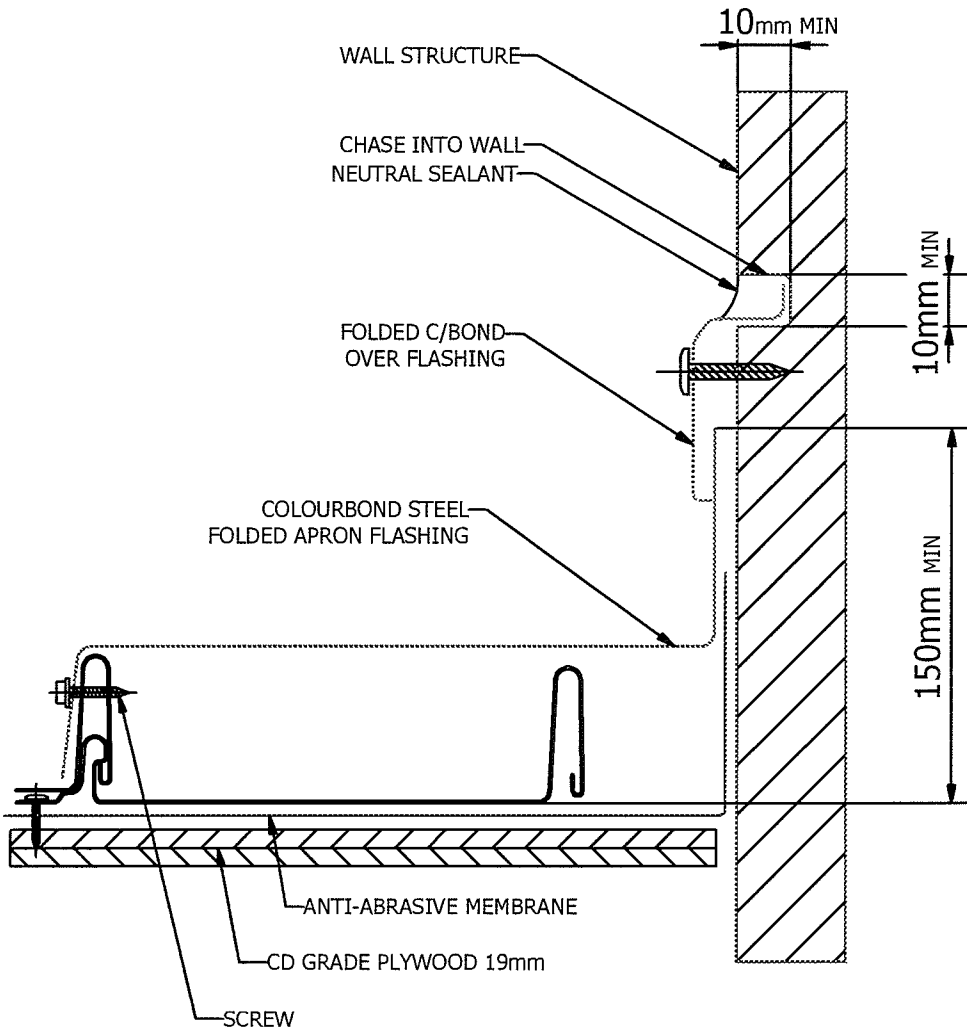

COLOURBOND NAILSTRIP FIXING INSTRUCTIONS

TYPICAL VALLEY OVER 7.5°

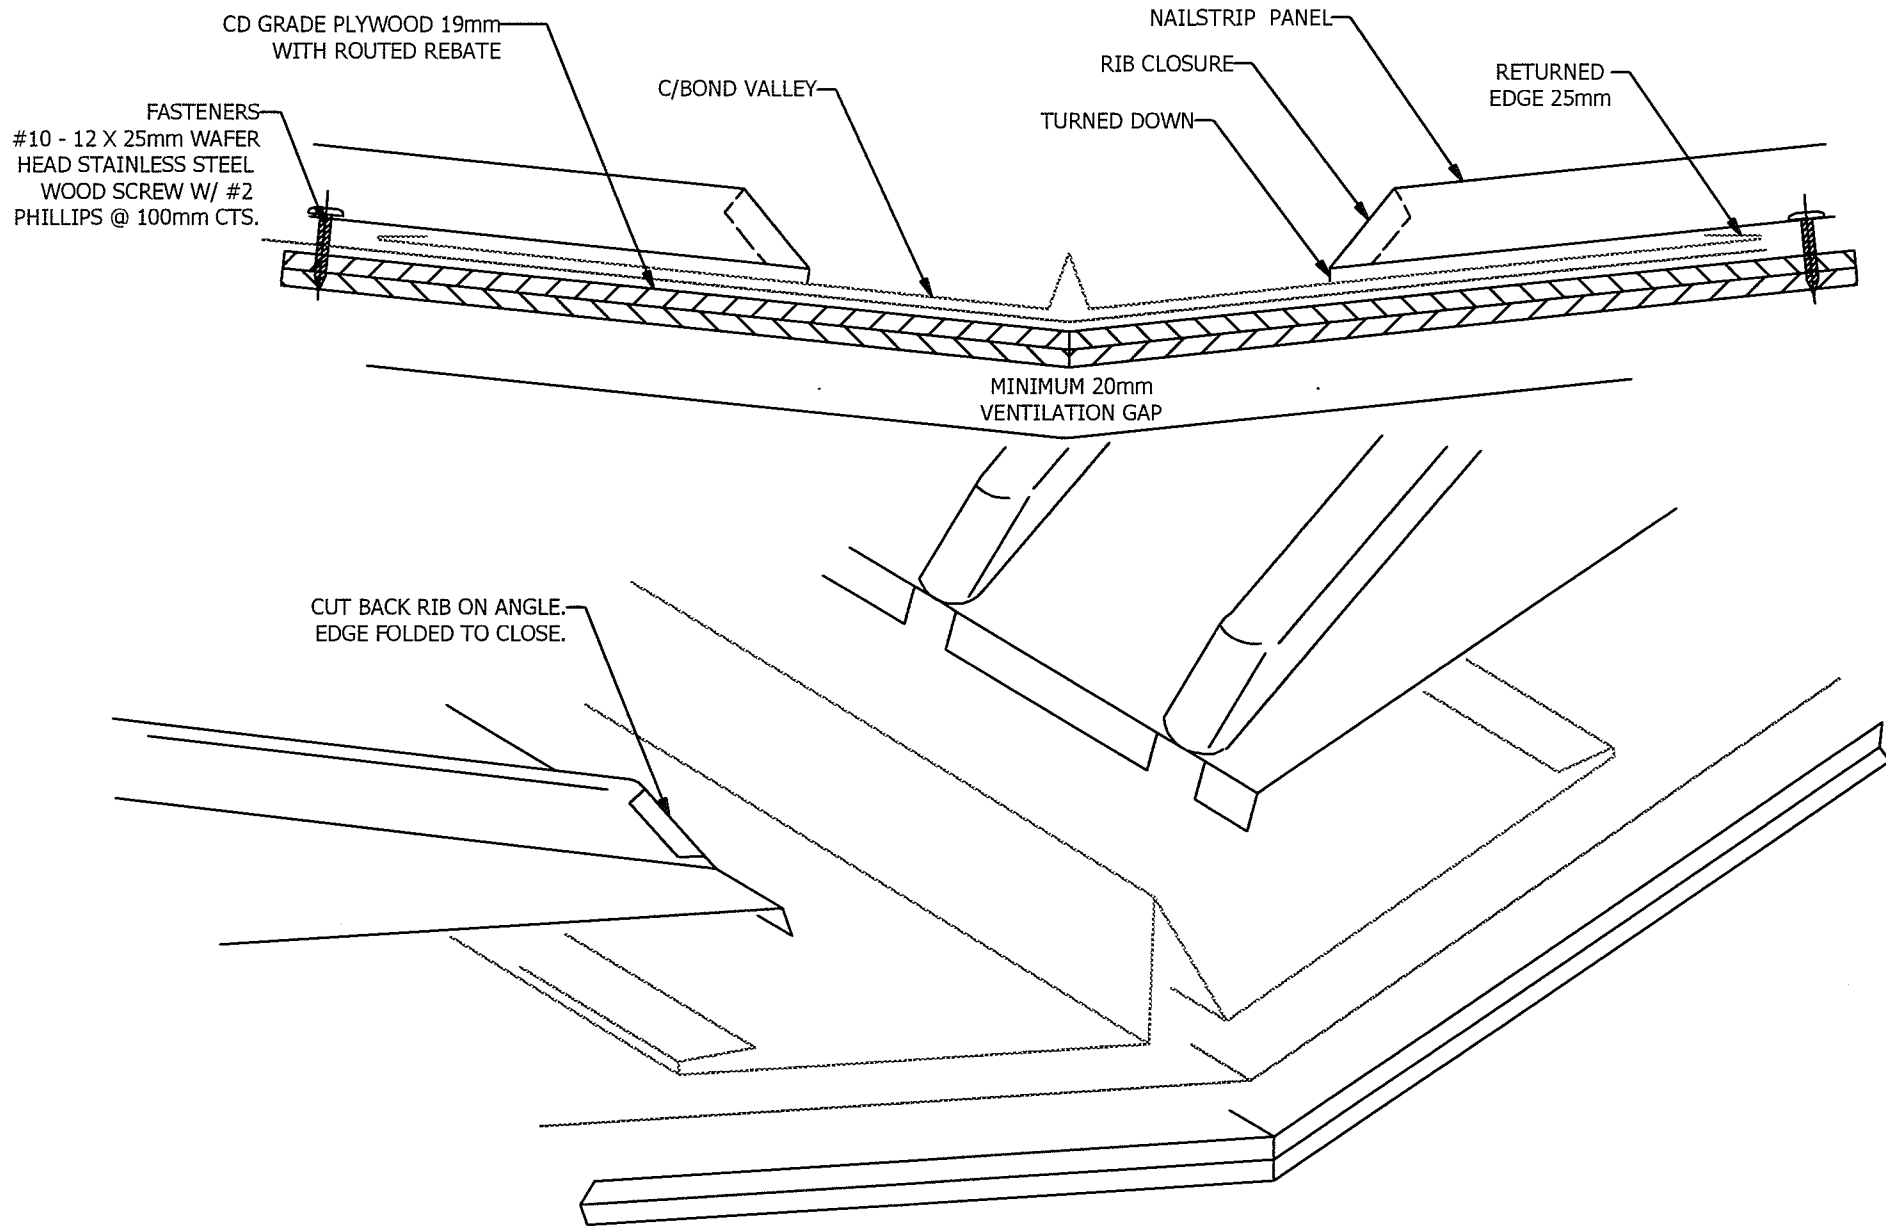

COLOURBOND NAILSTRIP FIXING INSTRUCTIONS

TYPICAL VALLEY UNDER 7.5°

